

Product Installation Guidelines

Version 1, 1 July 2024, Page 1 of 2

GalvinCare CP-BS Lead Safe™ Angled (75°) Wall Fixed Outlet 140mm w/ Forward Facing Aerator

PRODUCT CODES:

- 121.44.40.00





SPECIFICATIONS

- This outlet was designed to fit a wall mounted basin where the distance from the wall to the plug was greater than normal
- Low maintenance.
- Forward facing aerator.
- Finished in bright chrome plate for easy cleaning and durability.
- Lead Safe™ brass construction.*

IMPORTANT: All outlets are tested in accordance with AS/NZS 3718 and leave our premises in good working order.

*Our Lead Safe™ product range is compliant with the Lead Free Requirements of the NCC 2022 Vol. 3, Clause A5G4 (2) and NSF/ANSI 372.

WARNINGS: Special attentions to be paid on notes, photos, images, or drawings of assembly steps marked with the warning symbol.




TECHNICAL DATA			
Inlet		1/2" BSP - Male	
Outlet		Laminar Flow Aerator	
adwork		N/A	
Working Pressure Range (kPa)	Min	50	
	Max	500	
Working Temperature Range (°C)	Min	5	
	Max	65	
Nominal Flow Rate (LPM)		4.5	
Finish		Chrome	
NOTE: Galvin Engineering continually strive to improve their products. Specifications may change without notice.			


TOOLS REQUIRED

Spanner or adjustable crescent
Thread tape / sealant

PRE-INSTALLATION


MOUNTING DETAILS

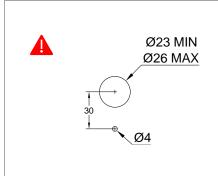

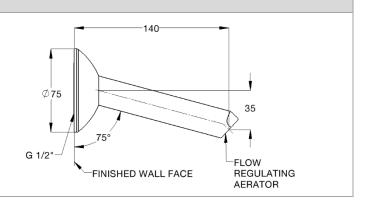


INSTALLATION

 INSTALLATION COMPLIANCE: Galvin Engineering products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.




1. Fit outlet

- Fit the outlet into the wall.
- Align anti-rotation pin to hole.

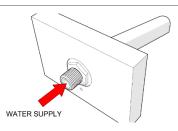


3. Connect the water line

 Connect water supply ensuring thread tape / sealant is used.



2. Secure the outlet

Secure the body with the supplied washer and backnut.

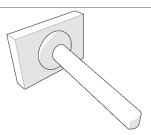

4. Testing

Once fitted, turn on the water supply and test for leaks.

TROUBLESHOOTING			
PROBLEM	CAUSE	RECTIFICATION	
Inconsistent flow	Blocked aerator	Remove aerator and clean	
Water is not flowing from the tap	Water is turned off	Turn on the water	

WARRANTY

Galvin Engineering products are covered under our Manufacturer's Warranty. Galvin Engineering products must be installed in accordance with the installation instructions and in accordance with AS 3500 and NCC Volume Three, relevant Australian Standards and local authorities applicable to product being installed. Water and electrical supply conditions must also comply to the applicable national and/or state standards, failing to comply with these provisions may void the product warranty and affect performance of the product.

Please visit www.galvinengineering.com.au to view the full warranty, our Installation Compliance and Maintenance & Cleaning information as well as any other additional information.

Within Australia: 1300 514 074 Outside Australia: P: +61 (0)8 9338 2344

F: +61 (0)8 9338 2340

sales@galvinengineering.com.au www.galvinengineering.com.au

ABN: 78 008 719 382

PERTH I SYDNEY I MELBOURNE I BRISBANE I ADELAIDE



