

Product Installation Guidelines

Version 1, 13 June 2024, Page 1 of 3

CP Lead Safe[™] Fixed Basin Outlet Aer Comp Gooseneck (5/8 MI)

PRODUCT CODES:

- 174.90.40.00





SPECIFICATIONS

- Fixed design.
- Robust construction for long life.
- Low maintenance.
- Finished in bright chrome plate for easy cleaning and durability.

IMPORTANT: All spouts are tested in accordance with AS/NZS 3718 and leave our premises in good working order.

*Our Lead Safe™ product range is compliant with the Lead Free Requirements of the NCC 2022 Vol. Three, Clause A5G4(2) and NSF/ANSI 372.

**Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718.

WARNINGS: Special attention to be paid on notes, photos, images, or drawings of assembly steps marked with the warning symbol.



	G 5/8" - Male
	Aerator
in	50
ax	500
in	5
ax	65
	5.43
	Brass
	Chrome
i	ax n

NOTE: Galvin Engineering continually strives to improve their products. Specifications may change without notice.

TOOLS REQUIRED

- Power drill
- Spanner or adjustable crescent
- Thread tape


PRE-INSTALLATION


MOUNTING DETAILS

 If the mounting holes do not already exist, mark out and drill the holes in the bench/trough, as shown in rough-in dimensions.



Note: Before installation, all lines must be flushed. We recommend that a line strainer be installed prior to eliminate any foreign material.

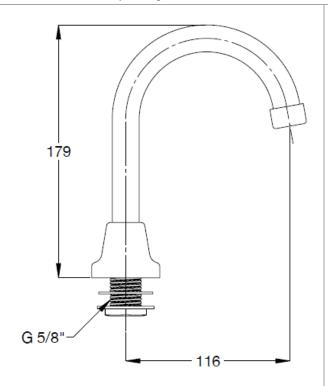

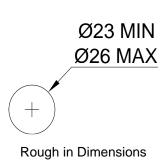

INSTALLATION

IMPORTANT: Galvin Engineering products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.



1. Fit spout

Fit the spout into the bench.



2. Secure the spout

 Secure the spout underneath with the supplied washer and back nut.



3. Connect

- Connect the outlet to the water supply.
- When applying thread tape or sealant to the inlet, ensure the opening is not obscured.



4. Testing

Turn on the water supply and test for leaks.

TROUBLESHOOTING			
PROBLEM	CAUSE	RECTIFICATION	
Inconsistent flow	Blocked aerator Blocked top assembly	Remove aerator and clean Remove top assembly and clean	
Water is not flowing from the tap	Water is turned off	Turn on the water	
Continuous flow	Top assembly loose or internally obstructed or damaged	Remove top assembly, clean with water and replace if required	

WARRANTY

Galvin Engineering products are covered under our Manufacturer's Warranty. Galvin Engineering products must be installed in accordance with the installation instructions and in accordance with AS 3500 and NCC Volume Three, relevant Australian Standards and local authorities applicable to product being installed. Water and electrical supply conditions must also comply to the applicable national and/or state standards, failing to comply with these provisions may void the product warranty and affect performance of the product.

Please visit www.galvinengineering.com.au to view the full warranty, our Installation Compliance and Maintenance & Cleaning information as well as any other additional information.

Within Australia: 1300 514 074 Outside Australia: P: +61 (0)8 9338 2344

F: +61 (0)8 9338 2340

sales@galvinengineering.com.au www.galvinengineering.com.au

ABN: 78 008 719 382

PERTH I SYDNEY I MELBOURNE I BRISBANE I ADELAIDE



