

# **Product Installation Guidelines**


Version 1, 12 June 2024, Page 1 of 4

CliniLever® CP-BS Lead Safe™ Hospital Wall Mixing Set Type 56 Fixed 80 J/V (QCH)

## PRODUCT CODES:

- 102.23.12.00



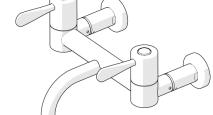

#### **SPECIFICATIONS**

- The CliniLever® product range is primarily used for hand washing applications in medical facilities, hospitals, aged care facilities, schools and in-home care.
- CliniLever® products provide state of the art features to comply with the latest healthcare guidelines.
- The dual levers for on/off, hot and cold temperature have a straight forward operation which simplifies hand washing.
- All CliniLever® products are laminar flow (not aerated).
- Our highly sought after lever handle design is easily operated with elbows or wrists to avoid hand contact.
- The main body is made of solid dezincification resistant (DR) brass rod, with a DR brass gooseneck outlet.
- Quick action SBA's includes brass jumper valve component, with red and blue indicator button on 80mm lever action handles.
- Lead Safe<sup>™</sup> brass construction. \*

**IMPORTANT**: All CliniLever® healthcare taps are tested in accordance with AS/NZS 3718 and leave our premises in good working order.

\*Our Lead Safe™ product range is compliant with the Lead-Free Requirements of the NCC 2022 Vol. Three, Clause A5G4(2) and NSF/ANSI 372.

\*\* Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718.

**WARNINGS:** Special attentions to be paid on notes, photos, images, or drawings of assembly steps marked with the warning symbol.



TECHNICAL DATA		
Inlet		½" BSP – Female
Outlet		Laminar Flow
Headwork		Jumper Valve
Working Pressure Range (kPa)	Min	50
	Max	500
Washing Tananasati na Banga (00)	Min	5
Working Temperature Range (°C)	Max	65
Nominal Flow Rate (LPM)		5.18
Finish		Chrome
NOTE: Galvin Engineering continually strive to improv	e their products. Specific	cations may change without notice.

TOOLS REQUIRED			
<ul><li>Power drill</li></ul>	- Spanner	- Hex key	Thread tape


# **PRE-INSTALLATION - MOUNTING DETAILS**


#### **Hole Centres**



- Hole centres must be at 215mm ±0.5mm
- This is critical to ensure easy installation
- Wall spuds must be 15BSP MI and protrude from the finished wall by no more than 15mm


Note: In some situations, a male thread connection on the tap may be more suited. If so, please contact us on 1300 514 074

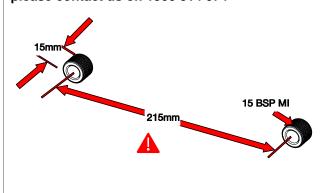

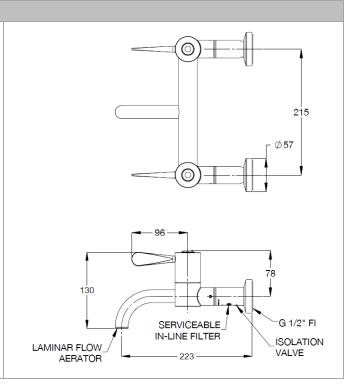


#### **INSTALLATION**

**IMPORTANT:** Galvin Engineering products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

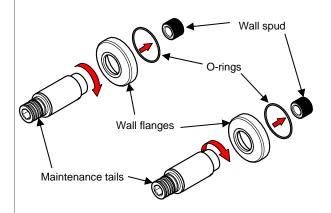


#### 1. Fit wall flange

- Remove the maintenance tails from the body and take the wall flanges out of the packaging.
- Ensure O-rings are secure in the rear of the wall flange and slide over the maintenance tail.

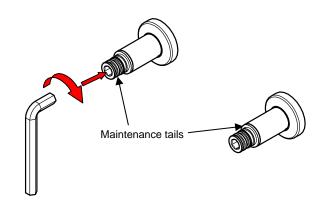


#### 2. Fit maintenance tail

 Fit the maintenance tail (with the wall flange) to the wall spud and fasten with the supplied 12mm Allen key. We recommend using thread tape or equivalent to ensure the connection does not leak.

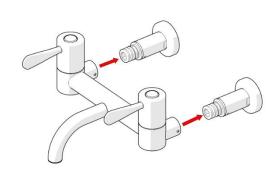

# 3. Fit assembly body

- Check maintenance tail to ensure O-rings are fitted and are in good condition.
- Fit the assembly body onto the maintenance tails until it sits flush against them, taking care not to damage the Orings.

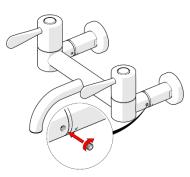

# 4. Fit grub screws and testing

Ensure the assembly body is pushed firmly against the maintenance tail and then secure in place with the supplied grub screws.
 ENSURE ALL FOUR (4) GRUB SCREWS ARE FITTED WITH THE SUPPLIED ALLEN KEY. If Grub Screws are missing, contact us on 1300 514 074.



 Once grub screws are secure, open the regulating valve prior to the tap. Open the lever handles and ensure there is flow from both hot and cold inlets. Inspect the tap and check for any leaks.

TROUBLESHOOTING				
PROBLEM	CAUSE	RECTIFICATION		
Taps are dripping water	Jumper valves are worn or damaged	Replace jumper valve		
	Tap seat is damaged	Refurbish tap seat using a reseating tool		
Water is leaking from spindle	O-ring on jumper valve spindle is damaged or worn	Replace O-ring		
Water is not flowing from tap	Water is turned off	Turn water on		
	Aerator or flow regulator is blocked by debris	Remove aerator/flow regulator from tap and remove debris. Install an in-line strainer.		
Spindle is difficult to turn	Build up of scale on spindle, spindle worn or O-ring has been damaged	Remove jumper valve, clean and regrease. Replace O-ring. Complete SBA may need to be replaced.		
Handle is loose	Screw has come loose	Tighten handle screw		
Flange does not screw down onto basin/sink surface	Tap bodies are set too far out	Re-position tap bodies and breach piece		

# **Product Installation Guidelines**

# **SERVICE AND MAINTENANCE**

- 1. Turn off the water supply and turn on the tap handle to drain water from the bodies.
- 2. Remove the temperature indicator from the handle.
- 3. Remove the handle from the tap.
- 4. Unscrew the top assembly from the body.
- 5. Check the O-ring on the spindle and the jumper valve for wear and damage. Replace if required.
- 6. Clean the spindle and body of debris.
- 7. Place a new O-ring (if required) onto the spindle and regrease with potable water approved grease.
- 8. Follow the product installation guidelines for the relevant product re-assembly method.

### **WARRANTY**

Galvin Engineering products are covered under our Manufacturer's Warranty. Galvin Engineering products must be installed in accordance with the installation instructions and in accordance with AS 3500 and NCC Volume Three, relevant Australian Standards and local authorities applicable to product being installed. Water and electrical supply conditions must also comply to the applicable national and/or state standards, failing to comply with these provisions may void the product warranty and affect performance of the product.

Please visit <u>www.galvinengineering.com.au</u> to view the full warranty, our Installation Compliance and Maintenance & Cleaning information as well as any other additional information.



F: +61 (0)8 9338 2340 sales@galvinengineering.com.au www.galvinengineering.com.au

ABN: 78 008 719 382





