




Product Installation Guidelines

Version 1, 19 July 2024, Page 1 of 4

Ezy-Wash® CP-BS Lead Safe™ Wall Mtd Pot & Kettle Filler Unit Type 70W w/ Fold Spout and Stop

PRODUCT CODES:

- 181.19.30.01

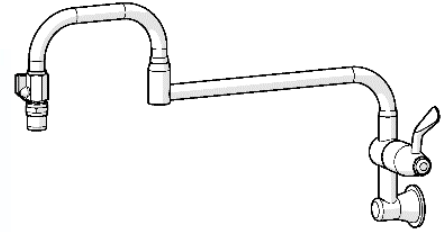

SPECIFICATIONS

- The identification buttons on the handles are standard and signify hot or cold water only. If water other than hot or cold is used (e.g. pre-mixed) then appropriate identification buttons will need to be purchased to replace those supplied on the standard unit.
- Suitable for installation over commercial pot sinks.
- High quality chrome finish for easy cleaning and hygiene maintenance.
- Lead Safe™ brass construction. *

IMPORTANT: All Ezy-Wash® Food Service taps are tested in accordance with AS/NZS 3718 and leave our premises in good working order.

*Our Lead Safe™ product range is compliant with the Lead-Free Requirements of the NCC 2022 Vol. Three, Clause A5G4(2) and NSF/ANSI 372.

** Any flow controller incorporated in the outlet to be tightened to prevent removal by hand. As Per AS3718.

WARNINGS: Special attentions to be paid on notes, photos, images, or drawings of assembly steps marked with the warning symbol.



TECHNICAL DATA


Inlet	Rp ½" - Female	
Outlet	Aerator	
Headwork	Ceramic Disc	
Working Pressure Range (kPa)	Min	50
	Max	500
Working Temperature Range (°C)	Min	5
	Max	65
Finish	Chrome	


NOTE: Galvin Engineering continually strives to improve their products. Specifications may change without notice.

TOOLS REQUIRED


- Power drill
- Spanner or adjustable crescent
- Thread tape

PRE-INSTALLATION – MOUNTING DETAILS

- Before installation, all lines must be flushed. 
- Galvin Engineering recommends the installation of strainers and pressure reducing valves (when necessary) to ensure clean consistent supply. Debris or poor water quality could affect the performance of the unit.
- Wall spud must be Rp ½" MI and protrude from the finished wall by no more than 15mm.

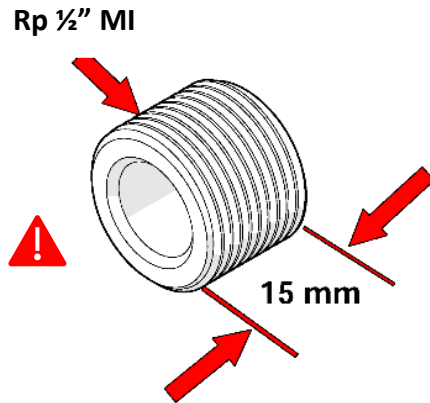


DIMENSIONS

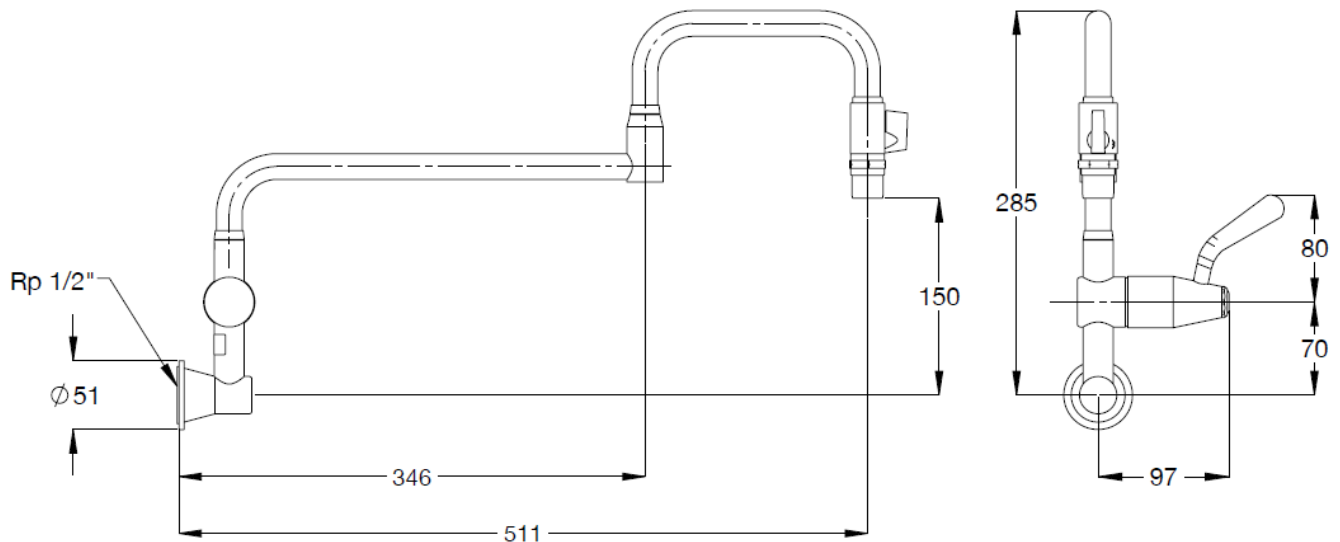


INSTALLATION

INSTALLATION COMPLIANCE: Galvin Engineering products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

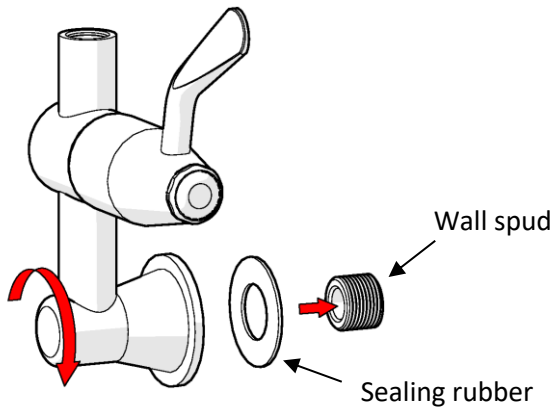

1. Fit tap assembly

- Fit the tap assembly to the wall spud protruding from the trough/wall. We recommend using thread tape or equivalent to ensure the connection does not leak.
- Ensure the sealing rubber washer is placed underneath the tap body, and that the tap is secured in the upright position.

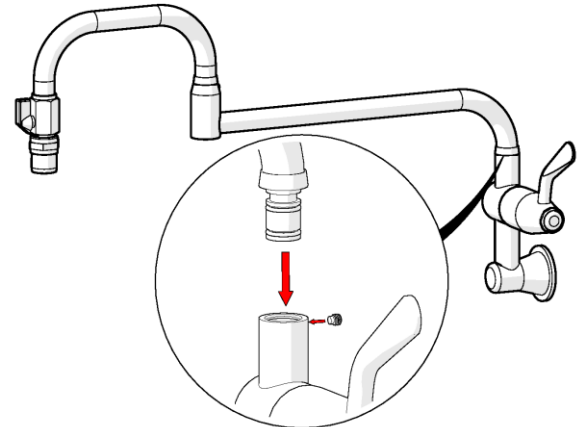

2. Fit outlet & test

- Fit outlet into tap spindle as shown, ensuring both sit flush and taking care not to damage the o-rings.
- Secure outlet with the supplied grub screws.
- Connect mains water supply, turn on the water and test the unit for leaks.

OPERATING INSTRUCTIONS

The unit must be turned OFF at the base (not at the ball valve) whilst the unit is not in use, to ensure the unit is not under mains pressure when unsupervised. Flood damage may occur if a failure occurs whilst the unit is under mains pressure (warranty is void in this instance).

Galvin Engineering recommends that a qualified plumber periodically services the unit and the swivel joints are regularly inspected to ensure grub screws remain secure.

TROUBLESHOOTING

PROBLEM	CAUSE	RECTIFICATION
Inconsistent flow	Blocked top assembly	Remove top assembly and clean
Water is not flowing from the tap	Water supply is turned off	Turn on the water supply
Continuous flow	Top assembly loose or internally obstructed or damaged	Remove top assembly, clean with water and replace ceramic disc if required
Handle is loose	Screw has come loose	Tighten handle screw

SERVICE AND MAINTENANCE

1. Turn off the water supply and turn on the tap handle to drain water from the bodies.
2. Remove the temperature indicator from the handle.
3. Remove the handle from the tap.
4. Unscrew the ceramic headpart from the body.
5. Check the O-ring on the ceramic headpart for wear and damage. Replace if required.
6. Clean the headpart and the body of any debris.
7. Replace the cartridge and hand-tighten back into the body.
8. Follow the product installation guidelines for the relevant product re-assembly method.

WARRANTY

Galvin Engineering products are covered under our Manufacturer's Warranty. Galvin Engineering products must be installed in accordance with the installation instructions and in accordance with AS 3500 and NCC Volume Three, relevant Australian Standards and local authorities applicable to product being installed. Water and electrical supply conditions must also comply to the applicable national and/or state standards, failing to comply with these provisions may void the product warranty and affect performance of the product.

Please visit www.galvinengineering.com.au to view the full warranty, our Installation Compliance and Maintenance & Cleaning information as well as any other additional information.

Within Australia: 1300 514 074 Outside Australia: P: +61 (0)8 9338 2344

F: +61 (0)8 9338 2340

sales@galvinengineering.com.au

www.galvinengineering.com.au

ABN: 78 008 719 382

PERTH | SYDNEY | MELBOURNE | BRISBANE | ADELAIDE

